 


You may also use the delicate spin-dry cycle of your washing machine: wrap pouch in a big towel and put in a snug fitting laundry net bag before putting into machine. If you are concerned about the pouch losing shape during the spin-dry cycle, we recommend the towel press method to remove the excess water.

Once you have removed the excess water, fix the pouch shape and dry it in a breezy and airy place.Make sure to dry completely. Keeping pouch in direct sunlight for a short time is not a problem, but prolonged exposure will lead to color fading and deterioration, so please be careful.

Wrap in a towel and use a laundry net bag!



## Caution

\*If not properly rinsed out and dried, mold will form.

\*The fabric or seams may come apart if the pouch is old or if the stitching is coming loose. In such cases, please take product to a professional cleaner. We will not assume any responsibility should the product deteriorate or become damaged due to the care procedures noted here. Please check the condition of the pouch before washing.

## Disclaimer

In general, the pouch may change shape to some extent if washed whole. If you are worried about this, please take to a professional cleaner. Claims of deformation after washing is not be recognized. Do all at your own risk.